

FIG. 1

 
 
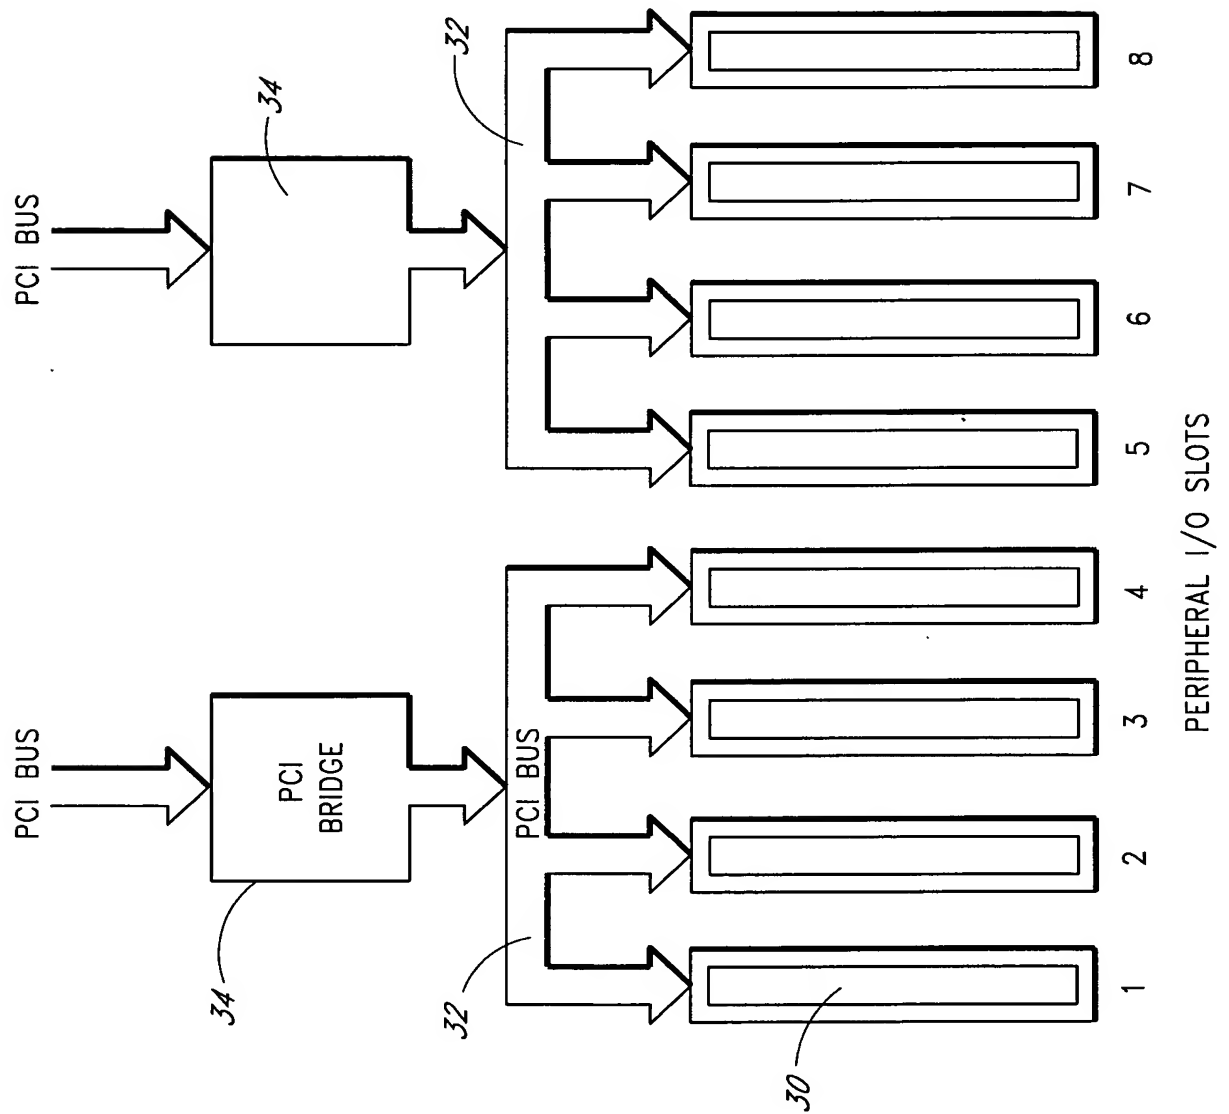 


 
FIG. 2

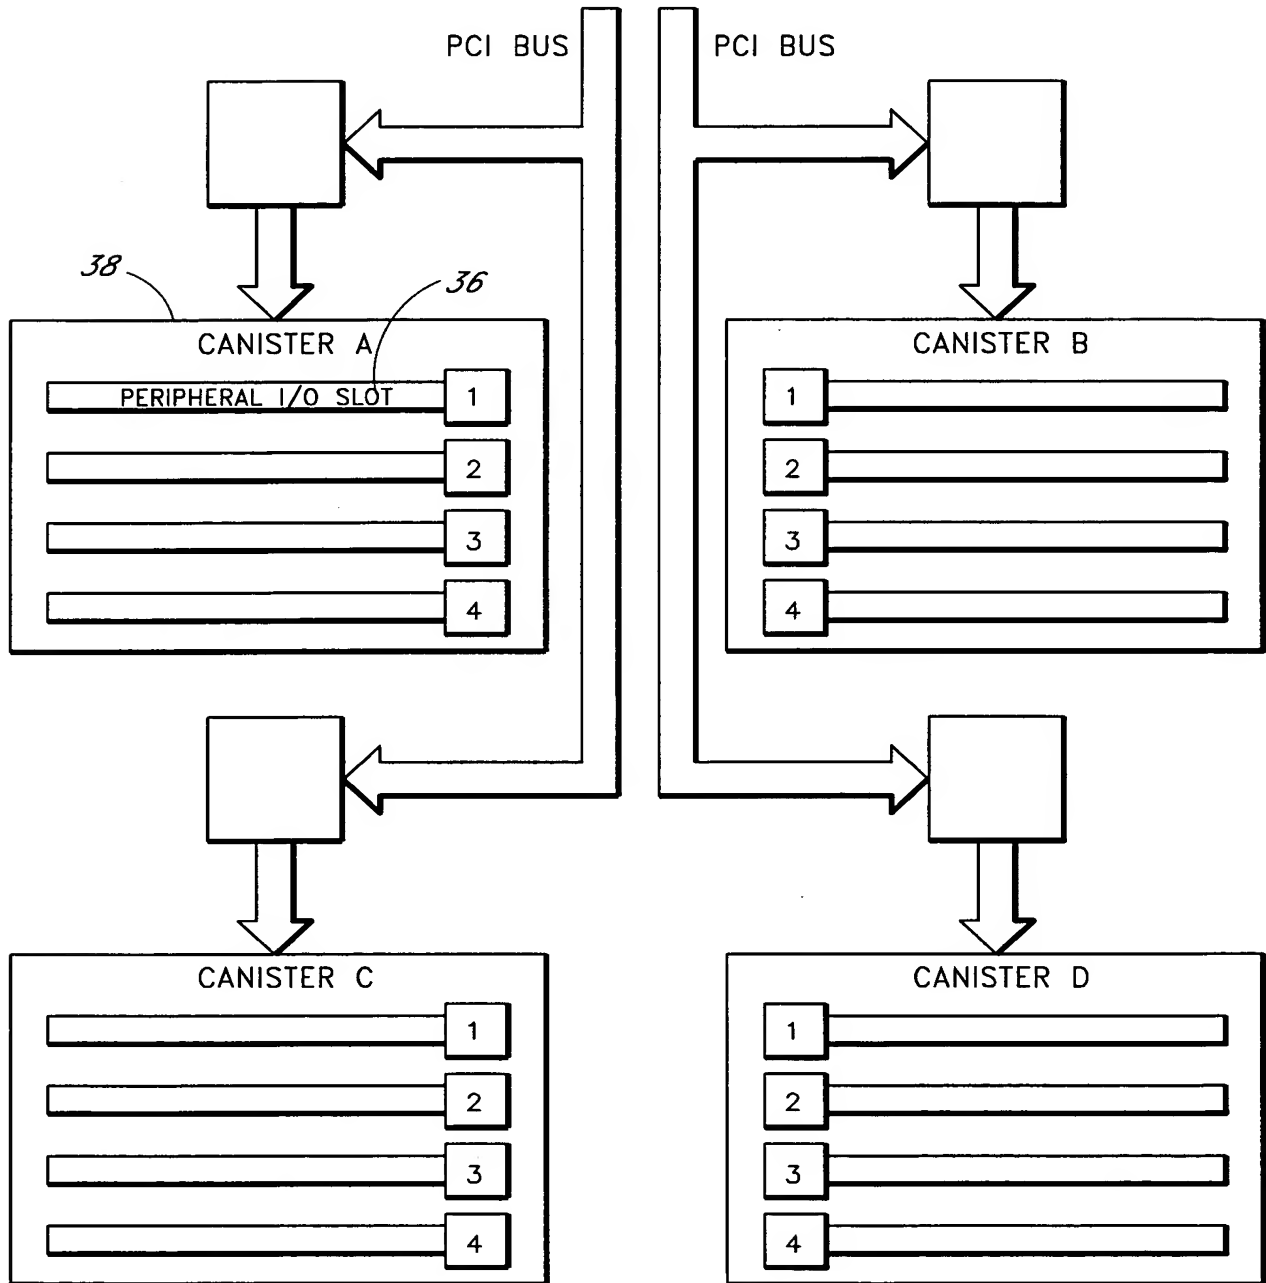

 
*FIG. 3*

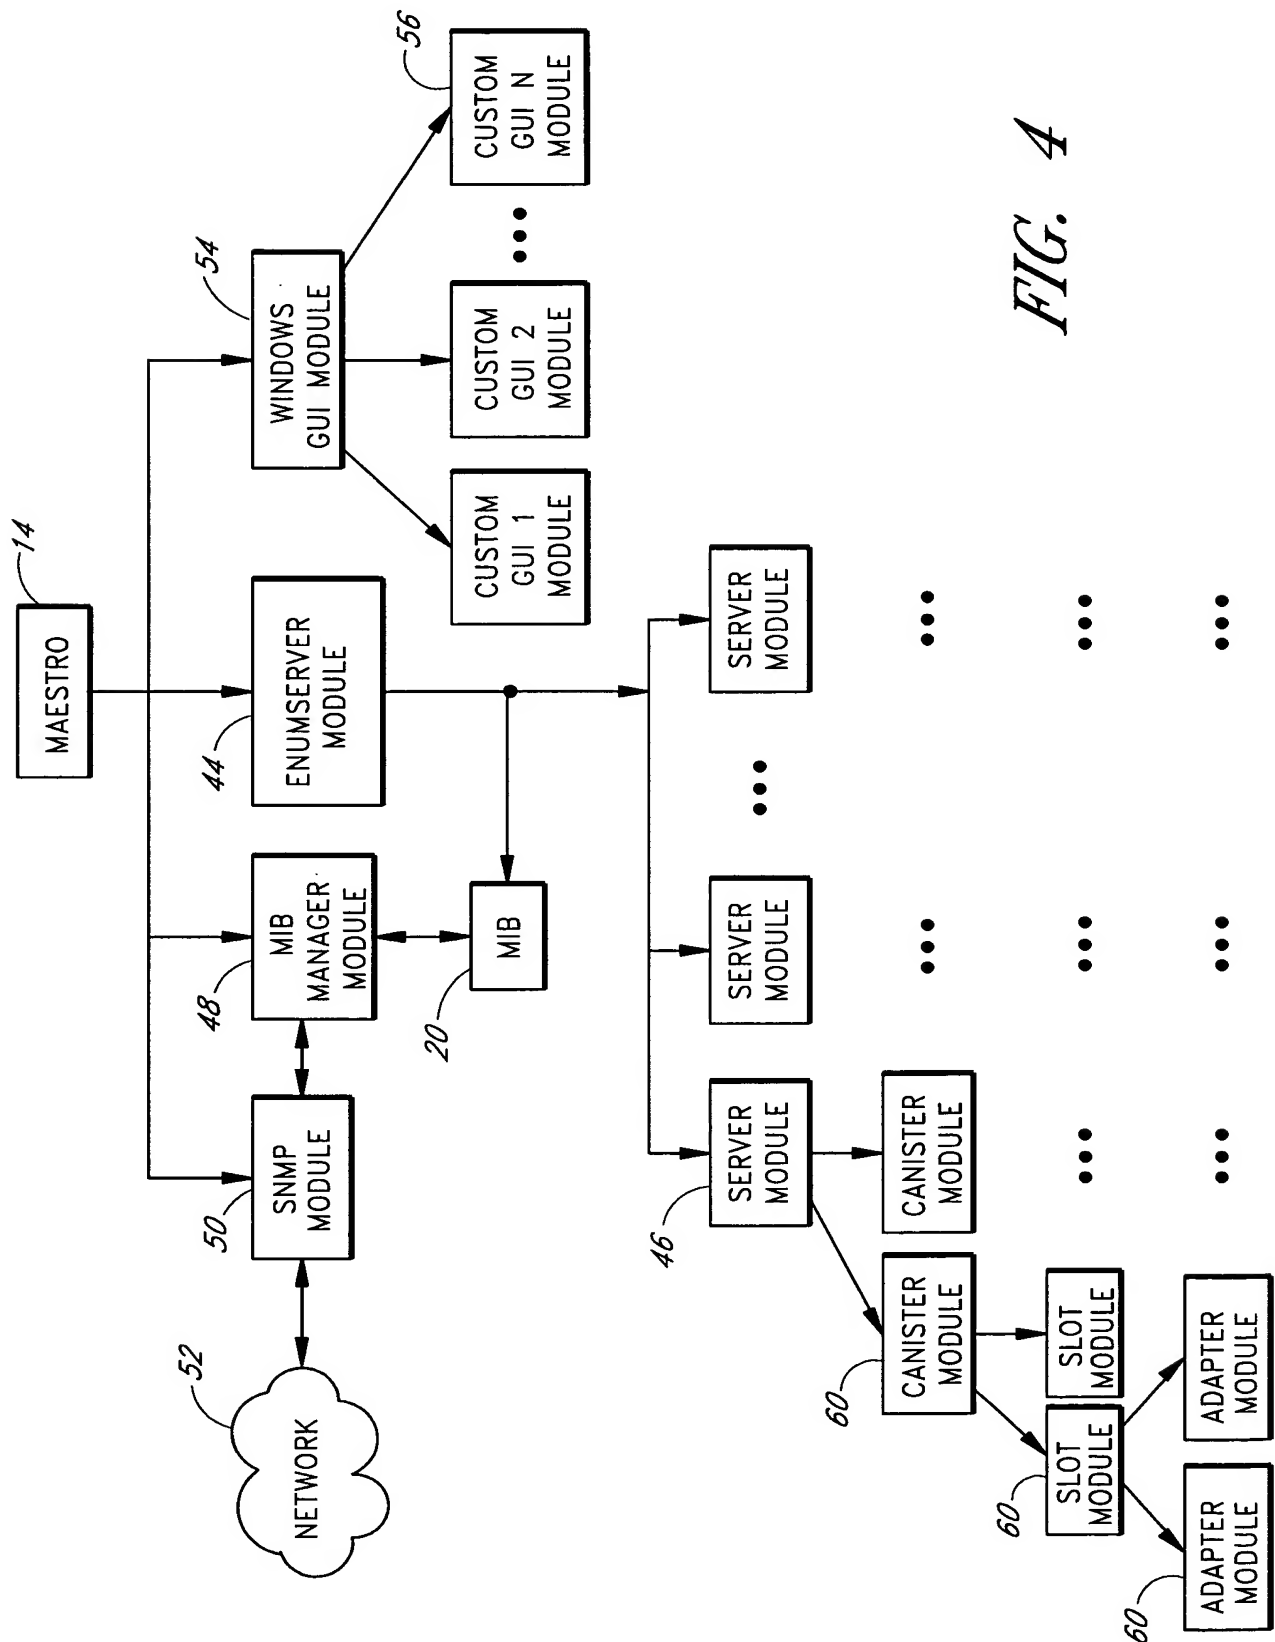 


*FIG. 4*

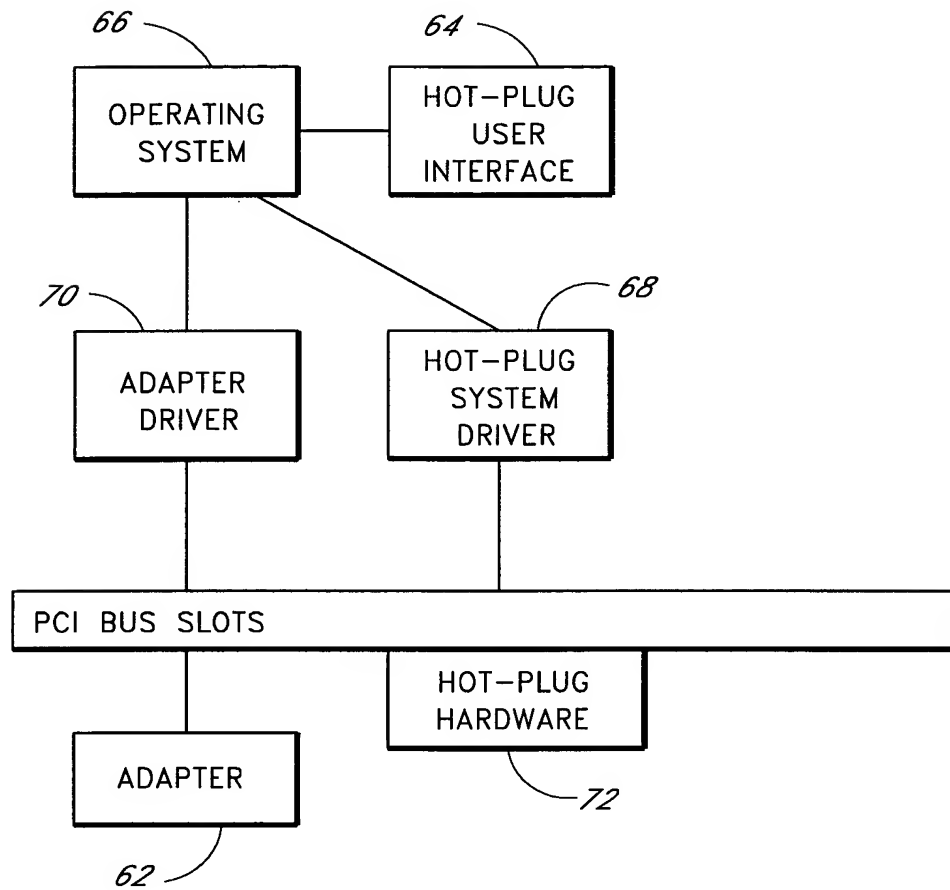


*FIG. 5*

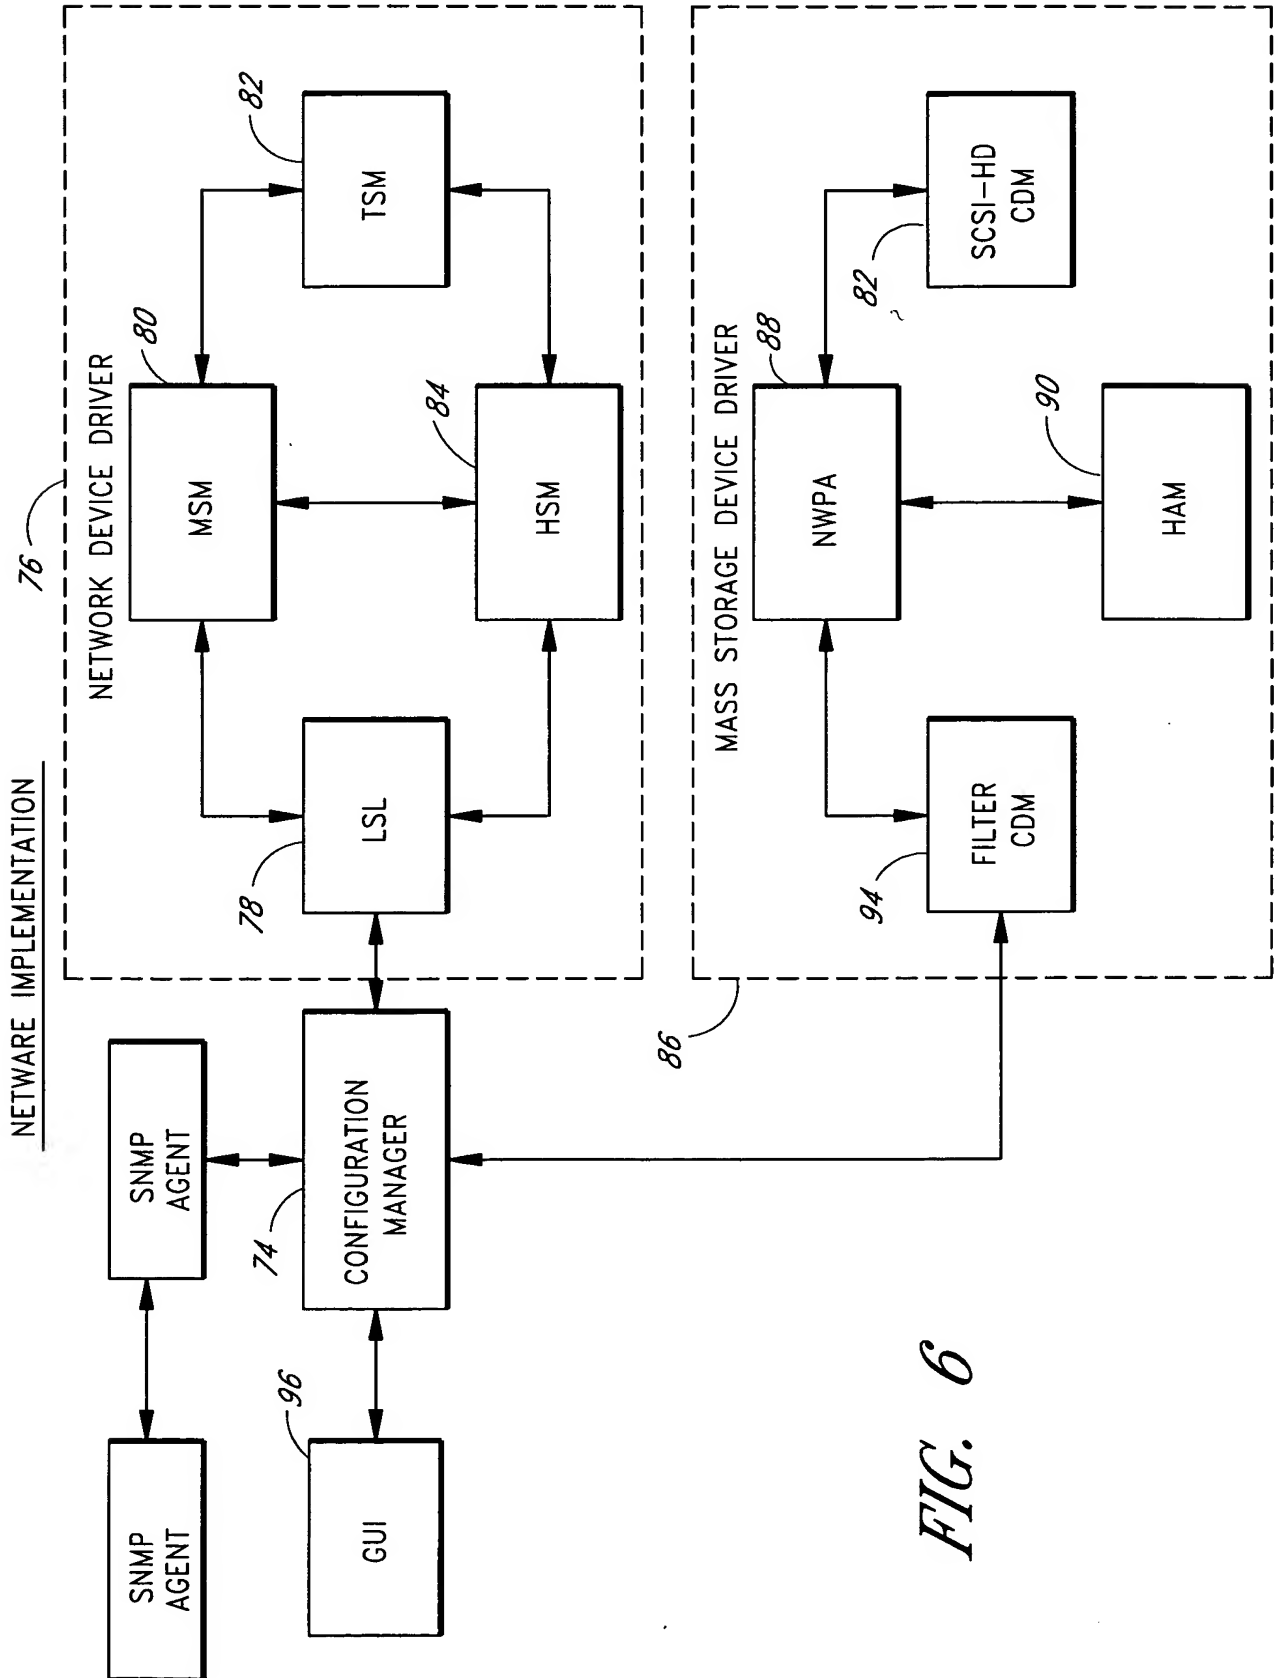




HOT SWAP

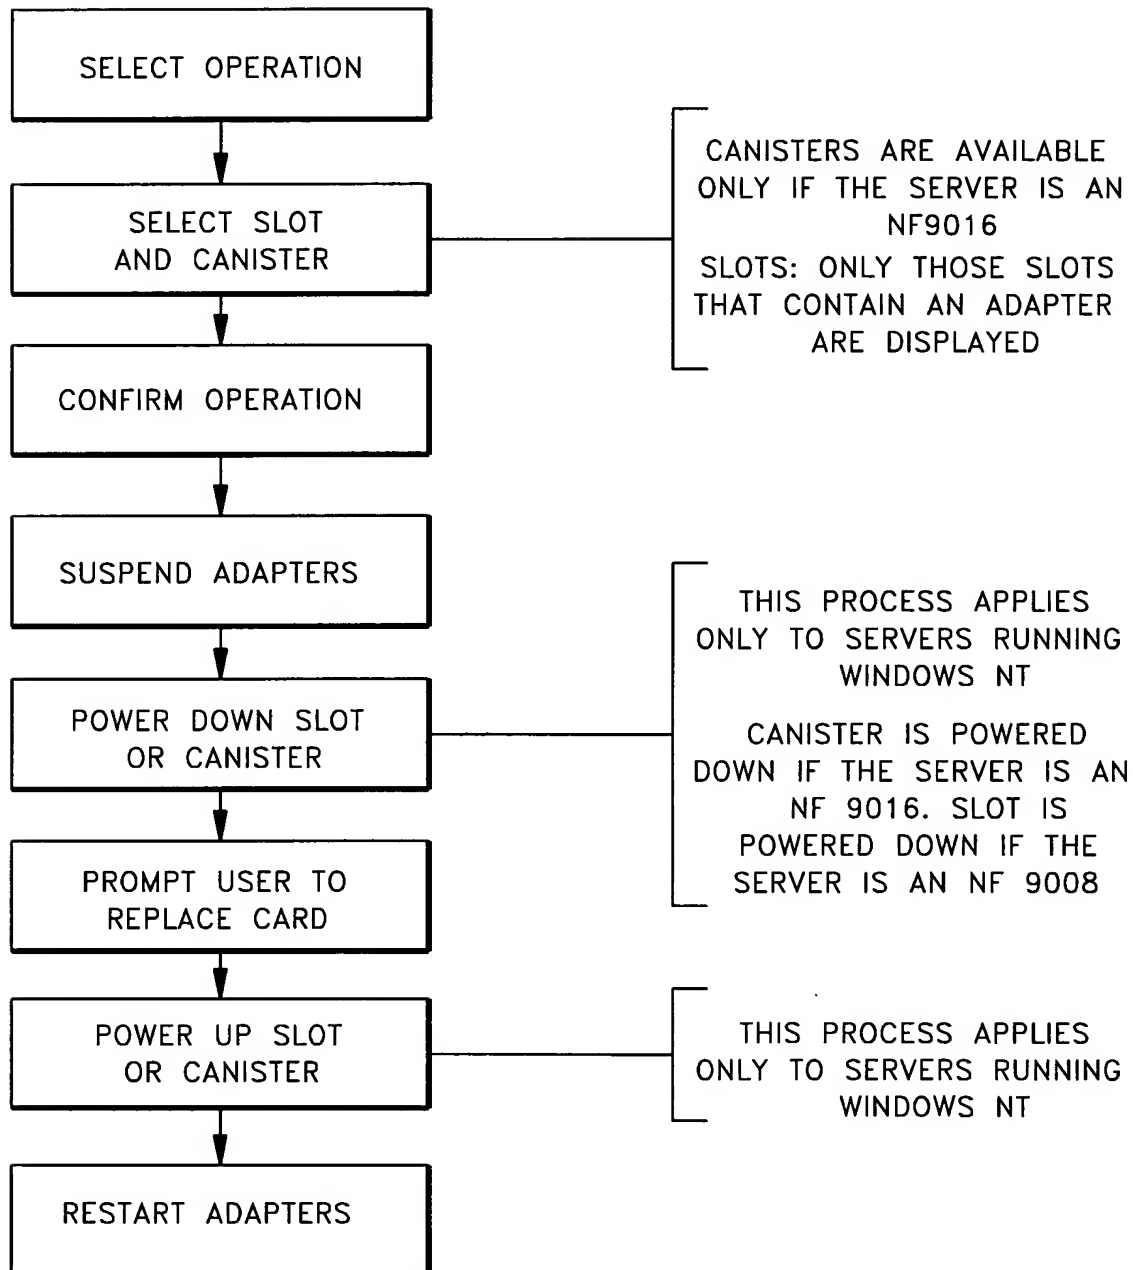 

*FIG. 8*




HOT ADD (NF-9008/NETWARE)

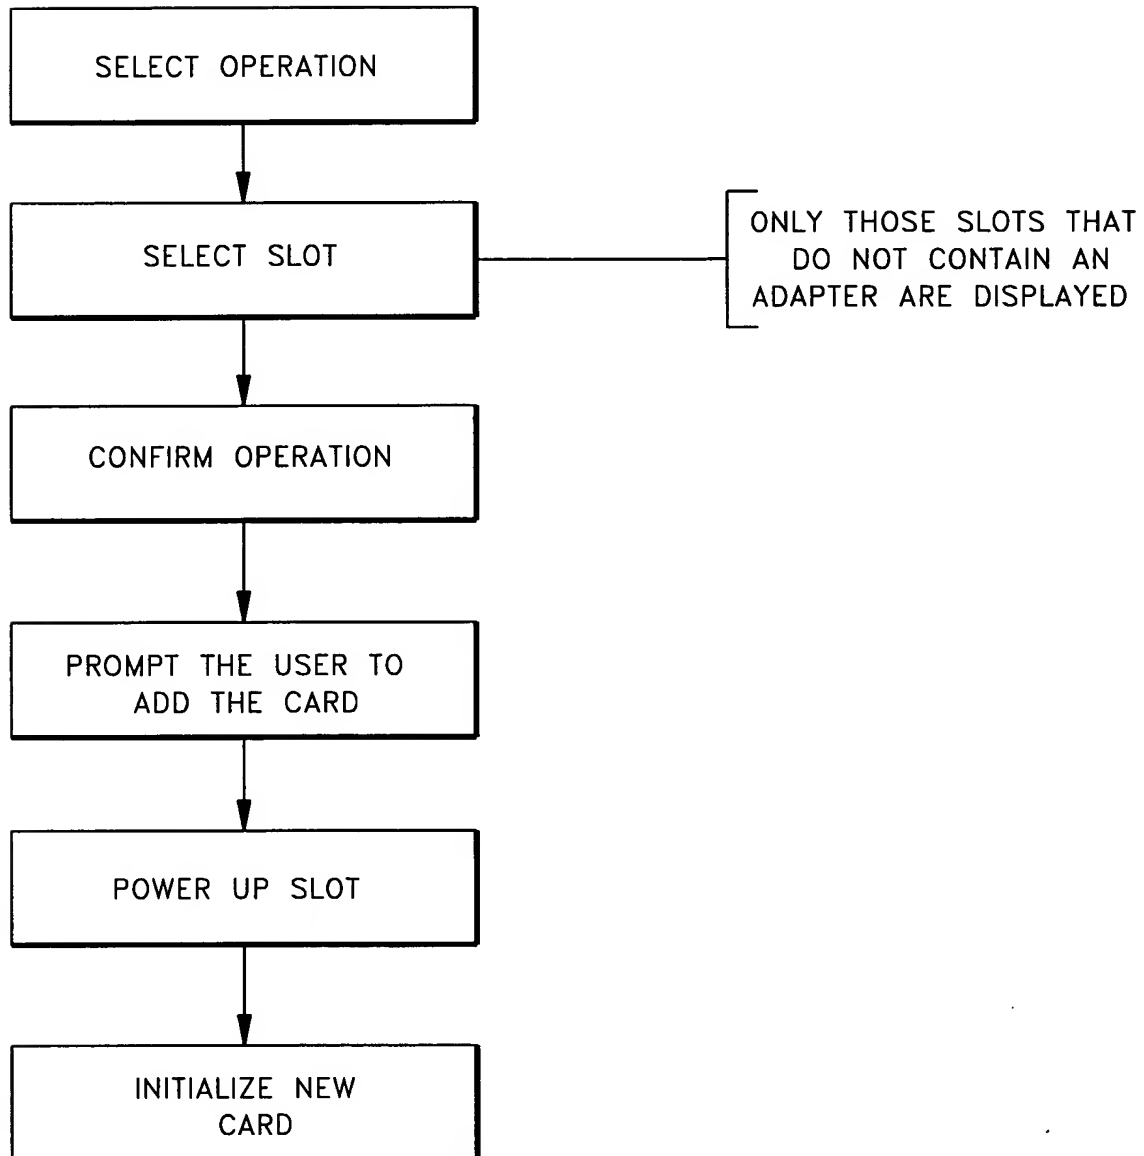 

*FIG. 9*

10/32

HOT ADD (NF-9016/NETWARE)

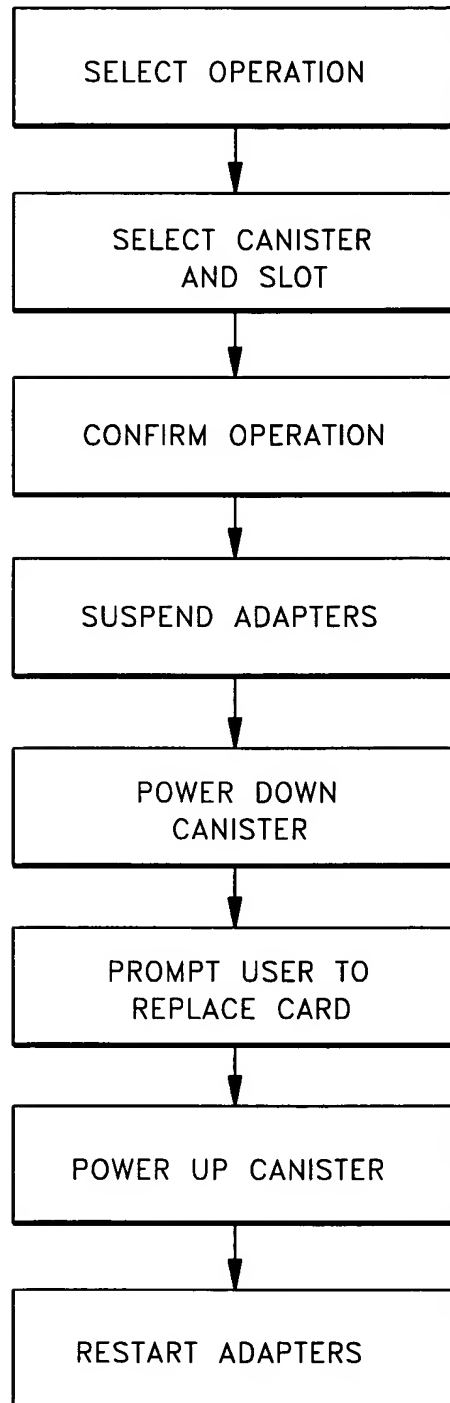 

*FIG. 10*

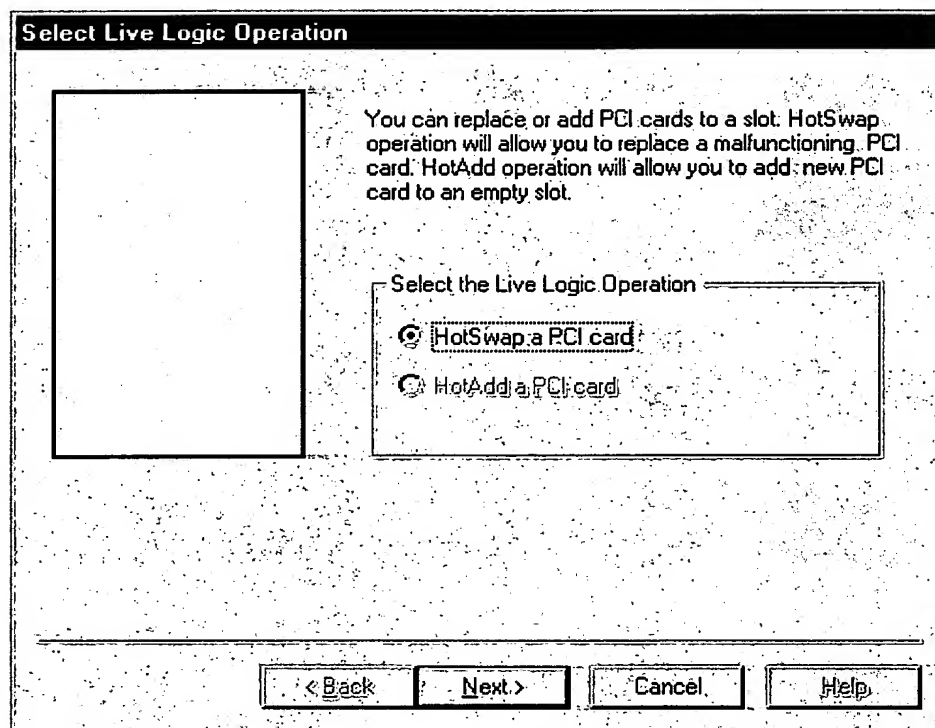 


FIG. 11

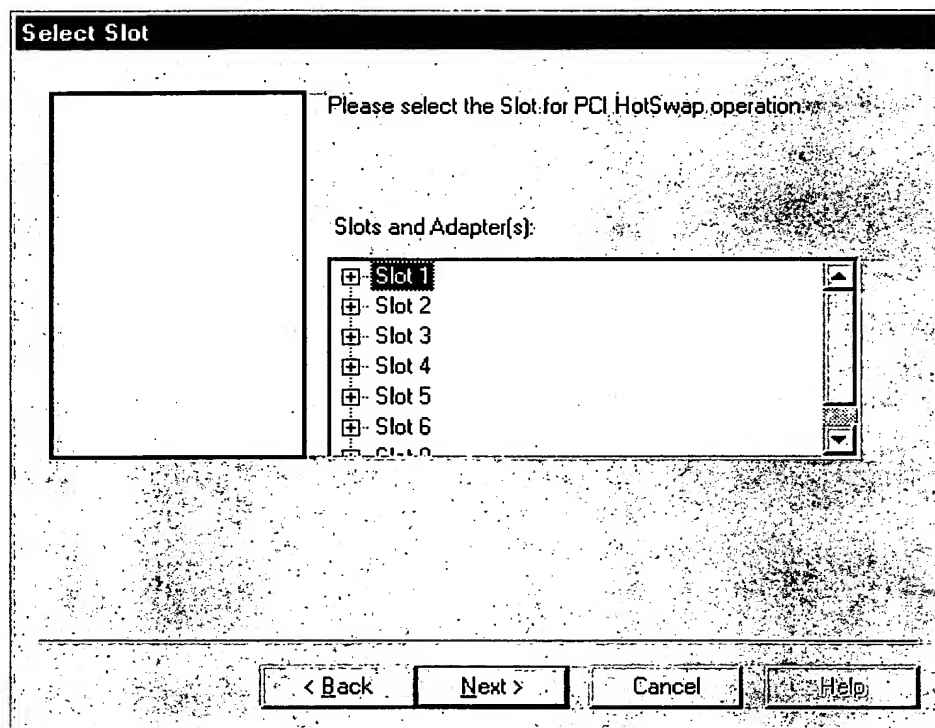 


FIG. 12

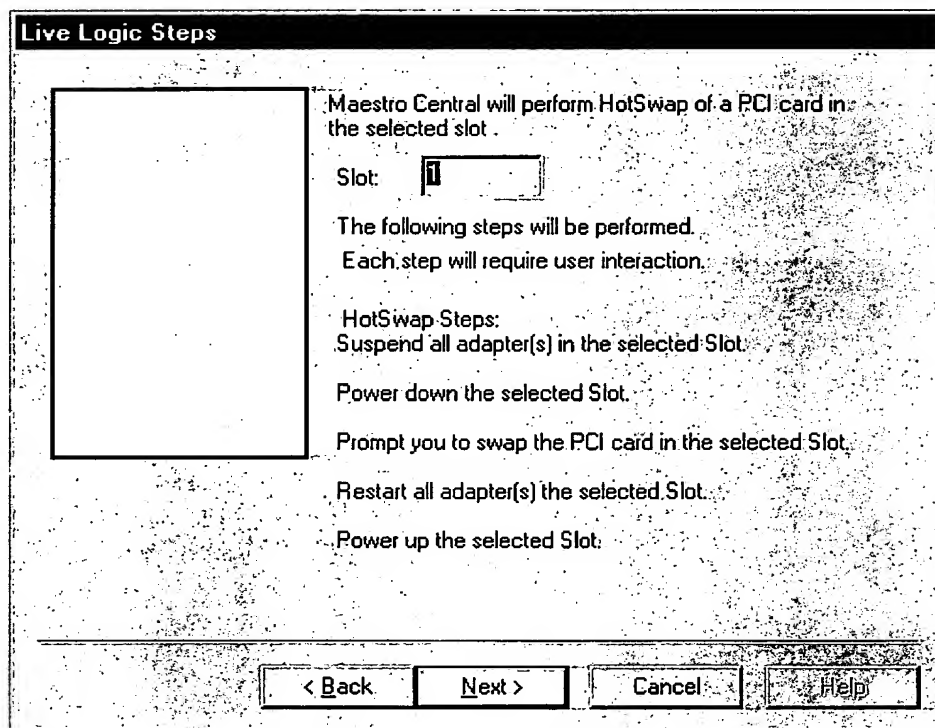 


FIG. 13

BEST AVAILABLE COPY

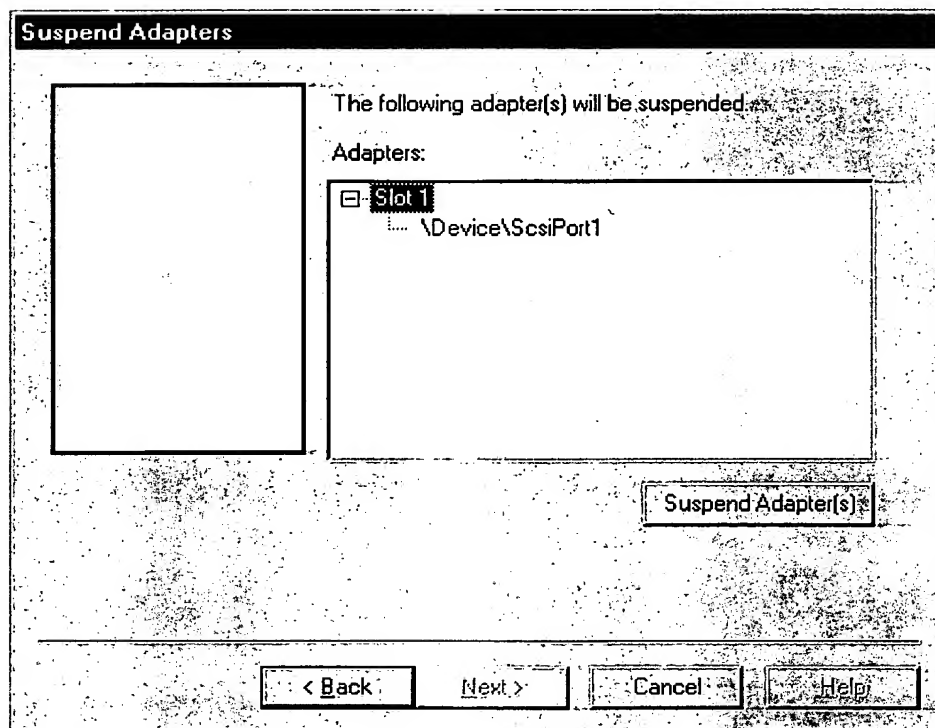 


FIG. 14

15/32

BEST AVAILABLE COPY

**Power Down Slot**

Maestro Central will now power down the following:

Slot:

FIG. 15

BEST AVAILABLE COPY

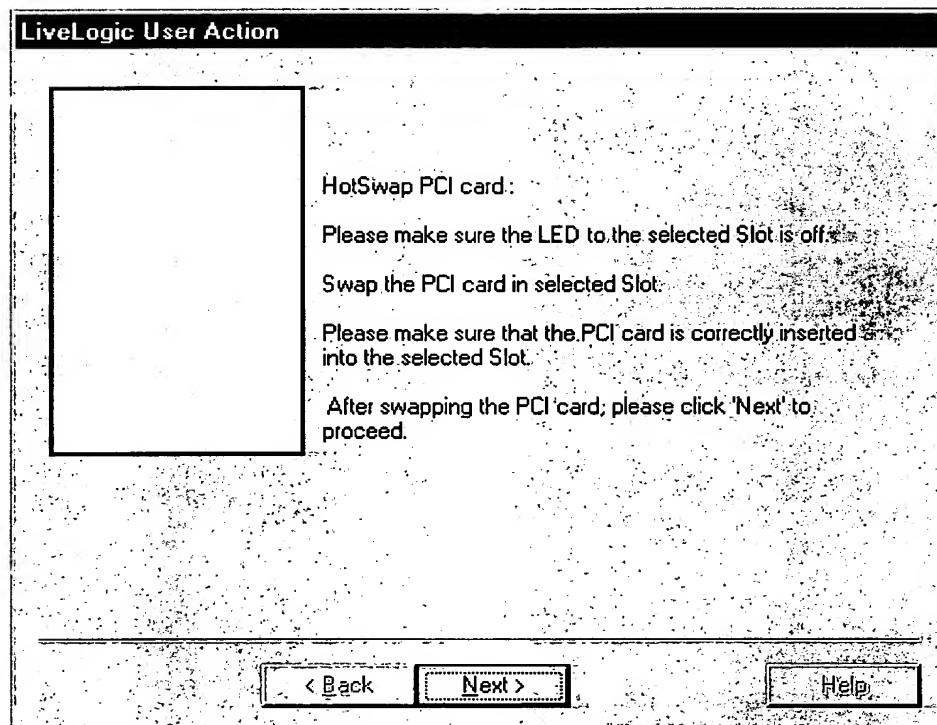 


FIG. 16



BEST AVAILABLE COPY

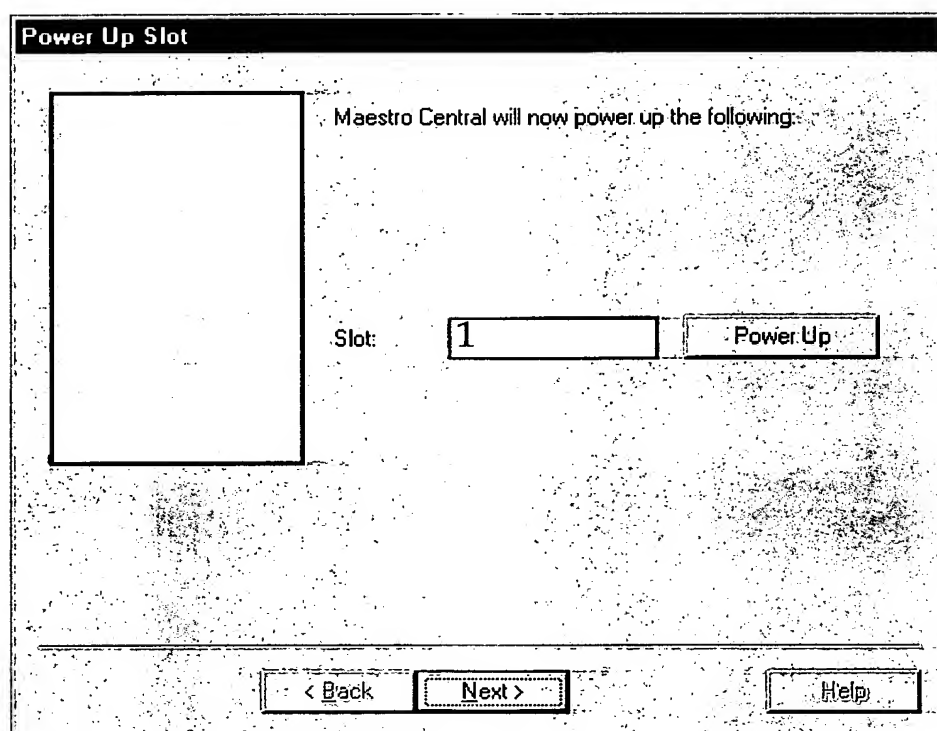 


FIG. 17

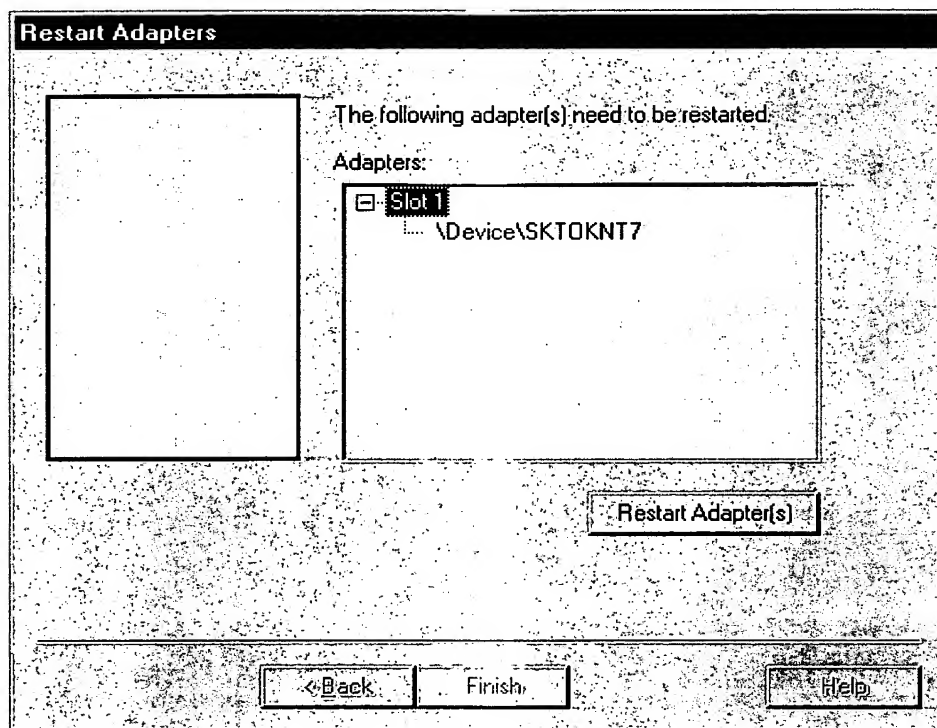 


FIG. 18

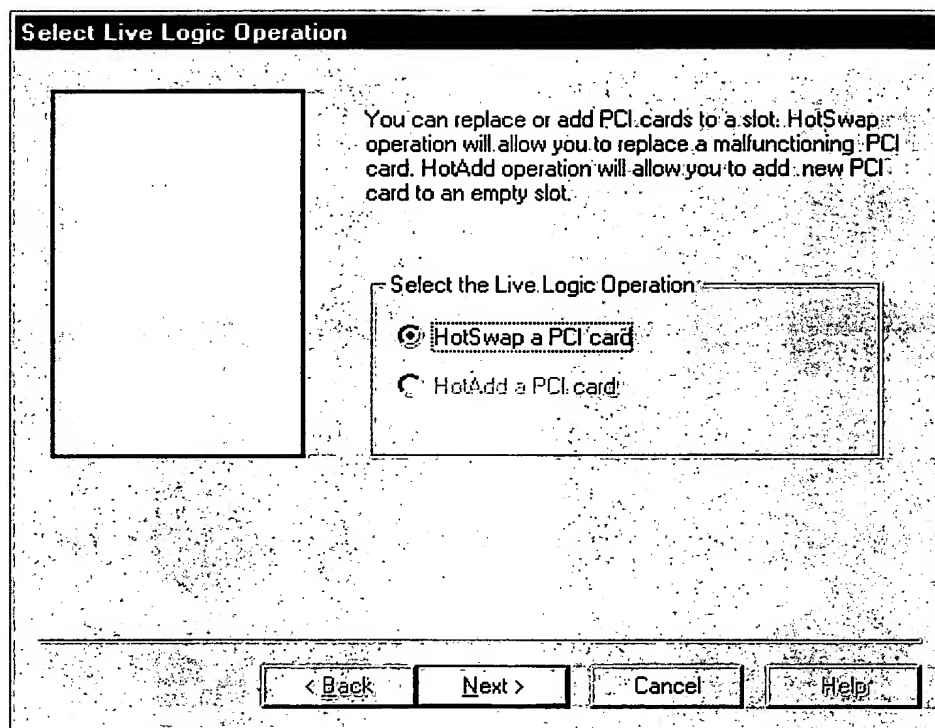 


FIG. 19

BEST AVAILABLE COPY

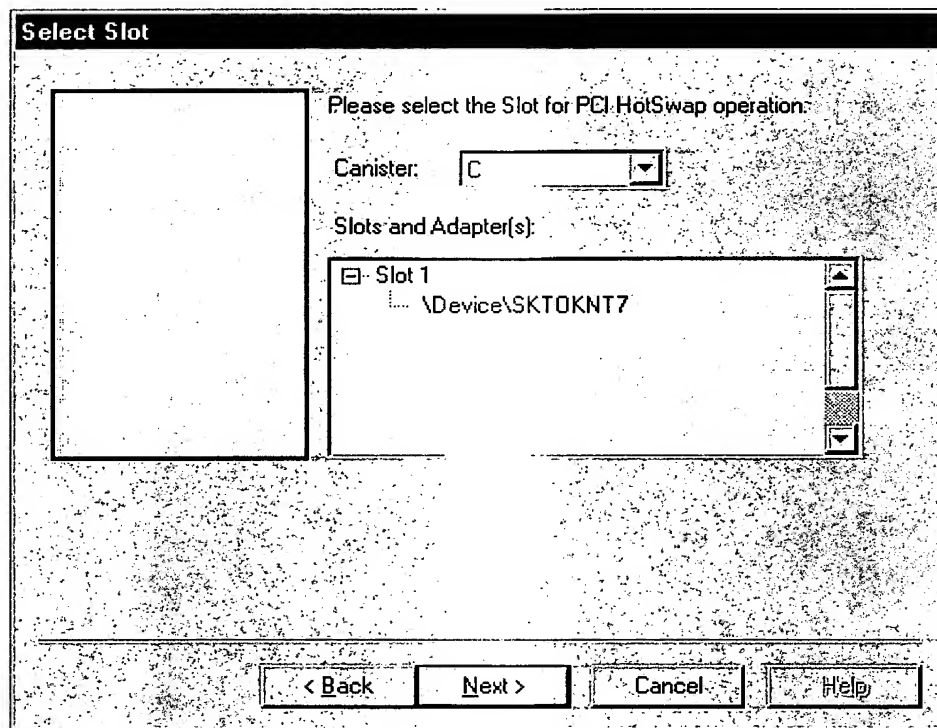 


FIG. 20

BEST AVAILABLE COPY

**Live Logic Steps**

Maestro Central will perform HotSwap of a PCI card in the selected slot in this Canister

Slot:  Canister:

The following steps will be performed:

Each step will require user interaction.

HotSwap Steps:

- Suspend the adapter(s) in the Canister.
- Power down the Canister.
- Prompt you to swap the PCI card in the selected Slot.
- Power on Canister.
- Restart the adapter(s) in the selected Slot.

< Back   Next >   Cancel   Help

FIG. 21

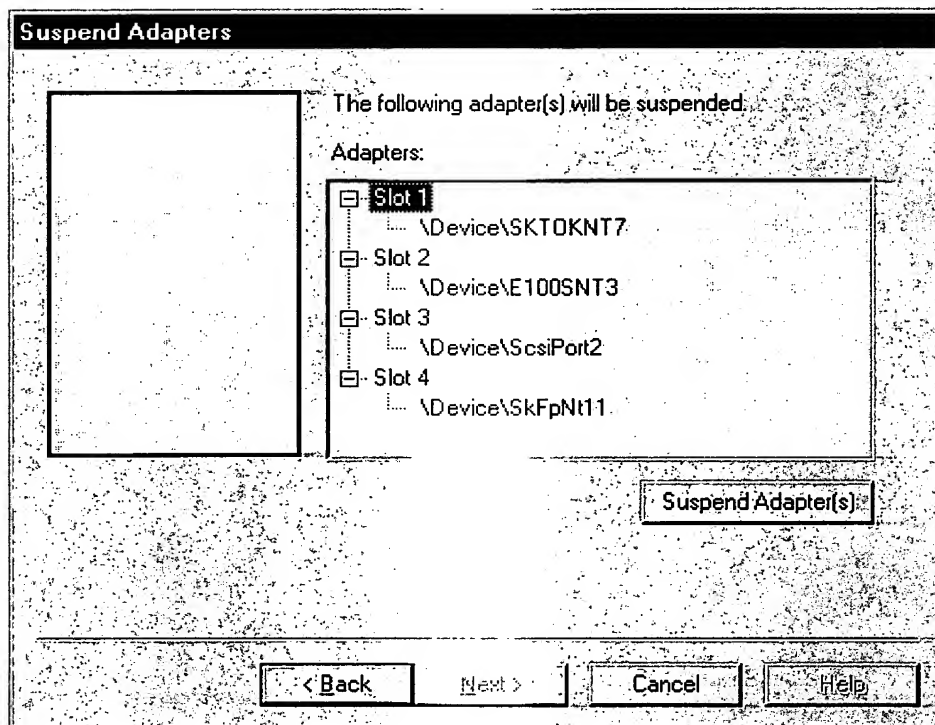 


FIG. 22

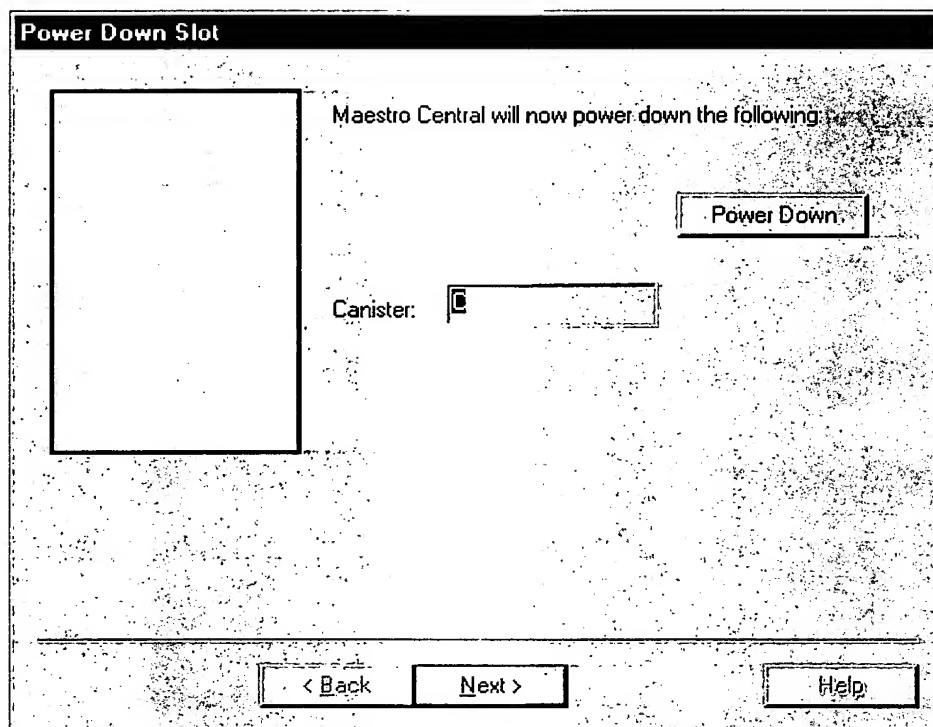 


FIG. 23

BEST AVAILABLE COPY

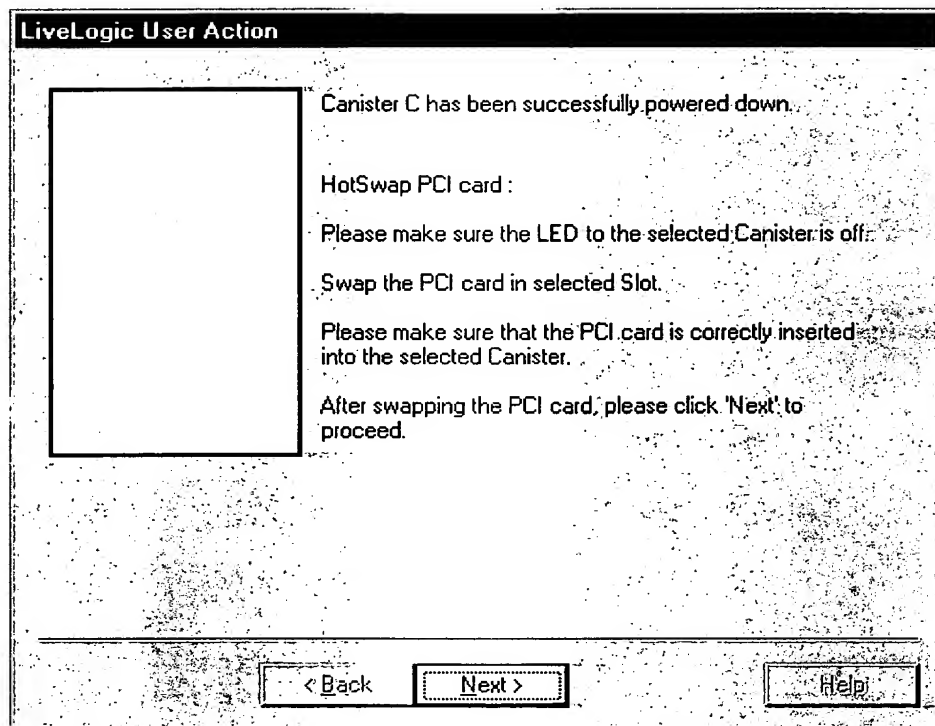 


FIG. 24



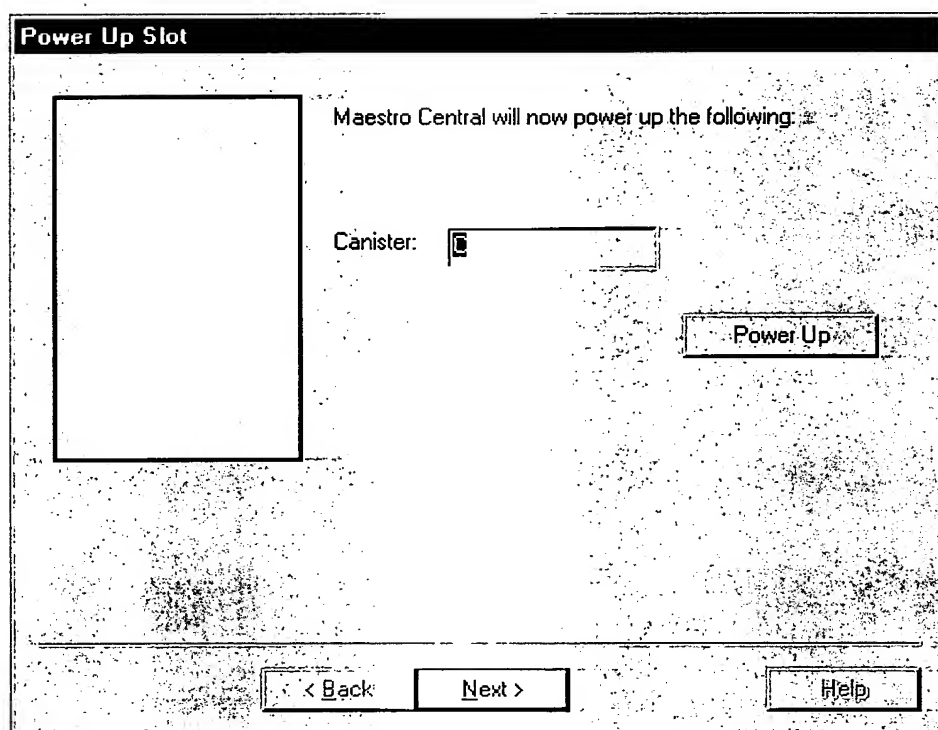 


FIG. 25

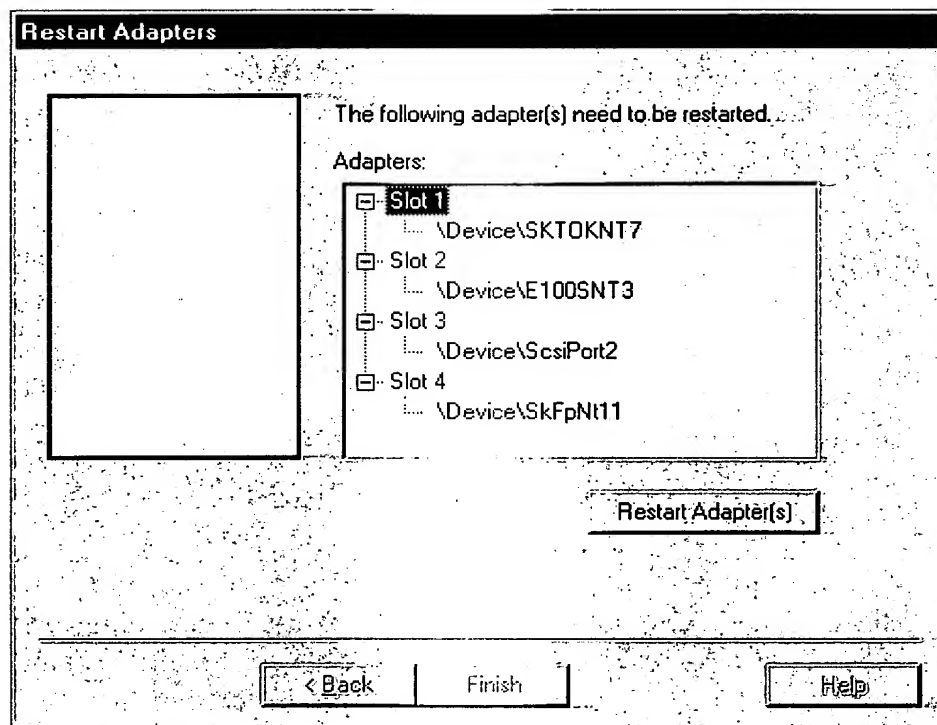 


FIG. 26

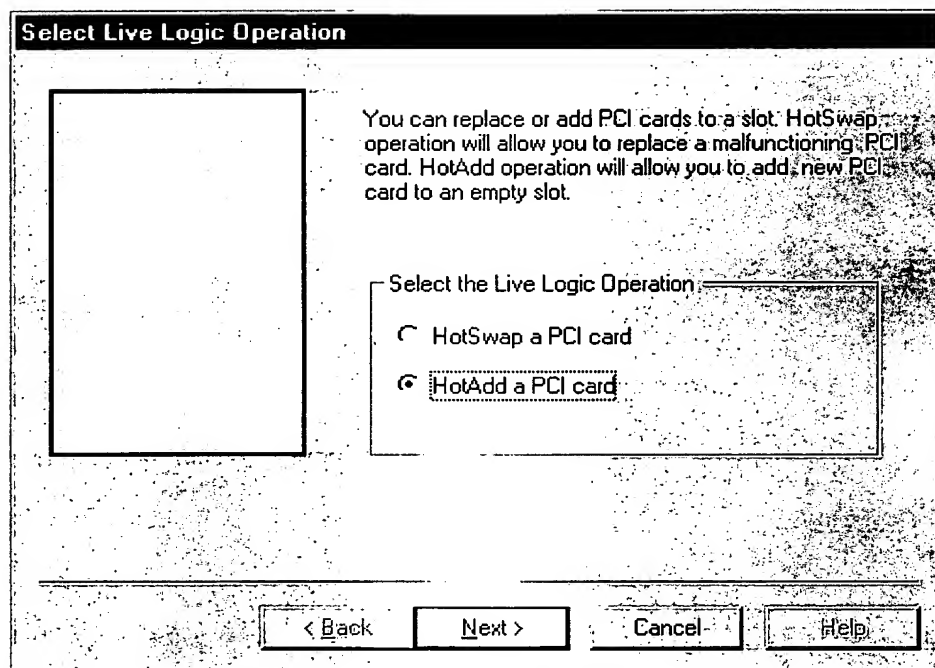 


FIG. 27

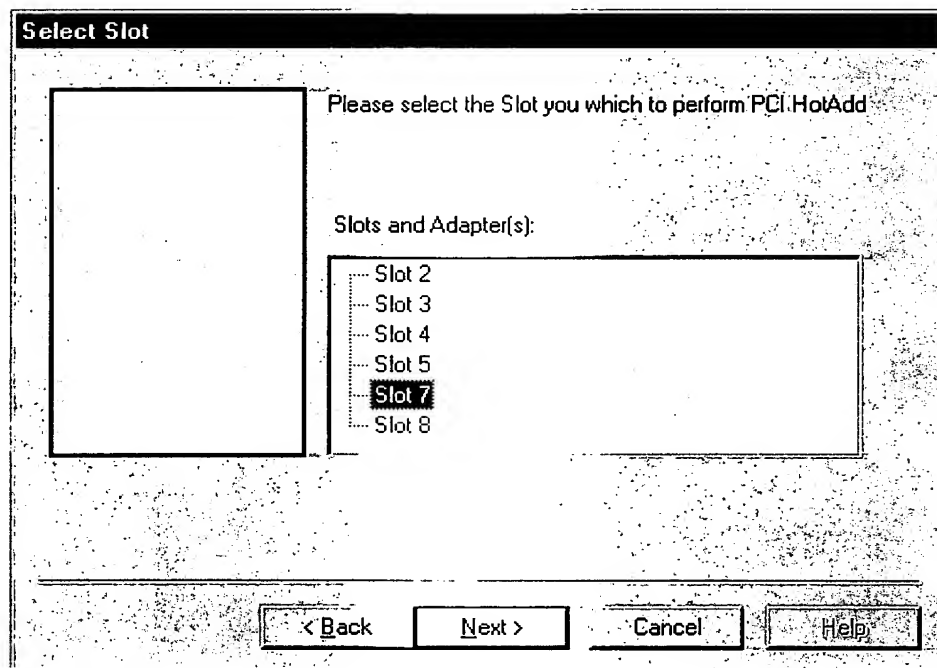 


FIG. 28

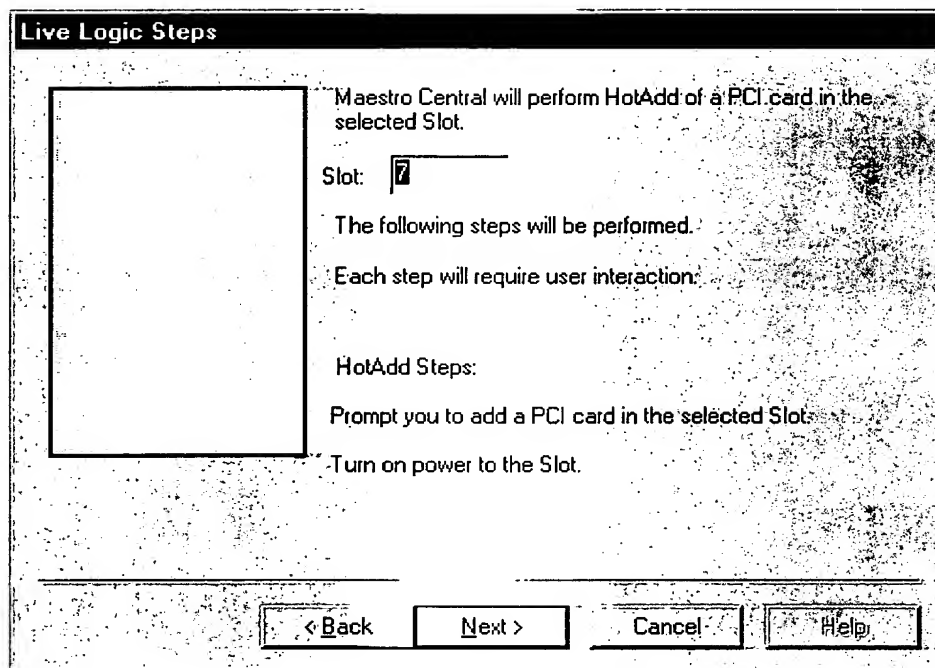 


FIG. 29

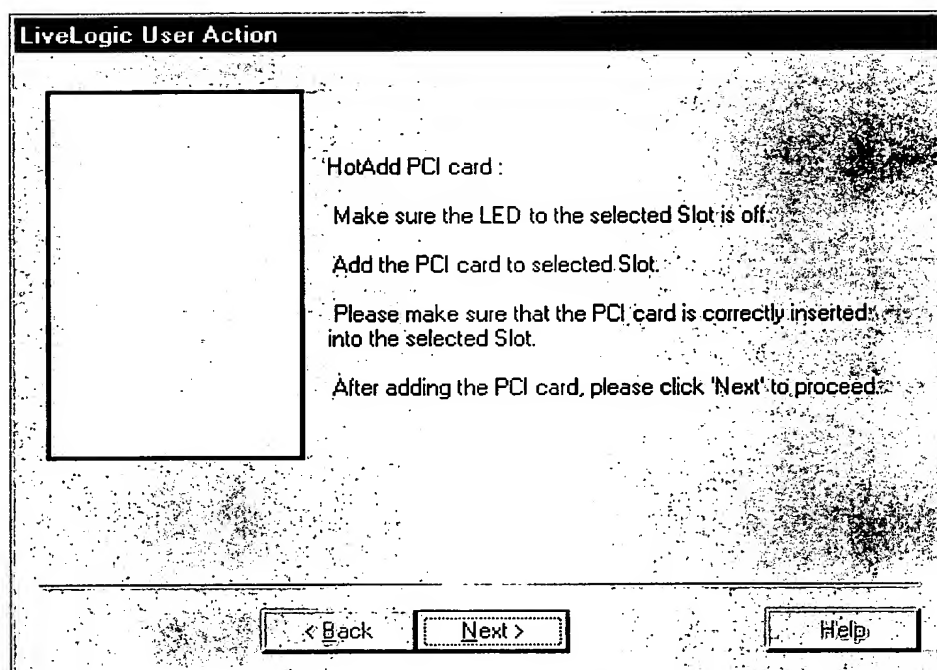 


FIG. 30

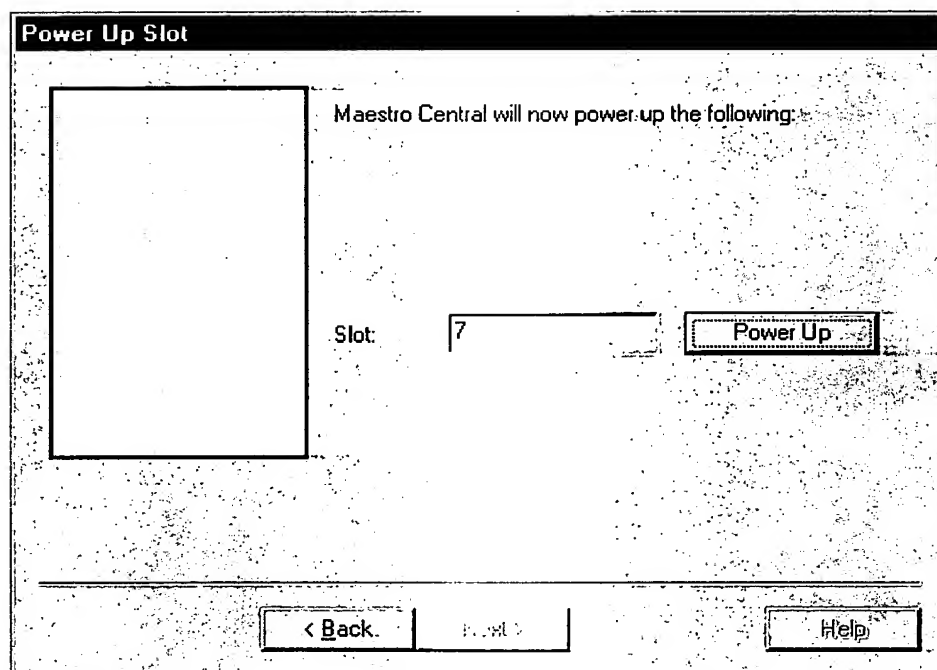 


FIG. 31

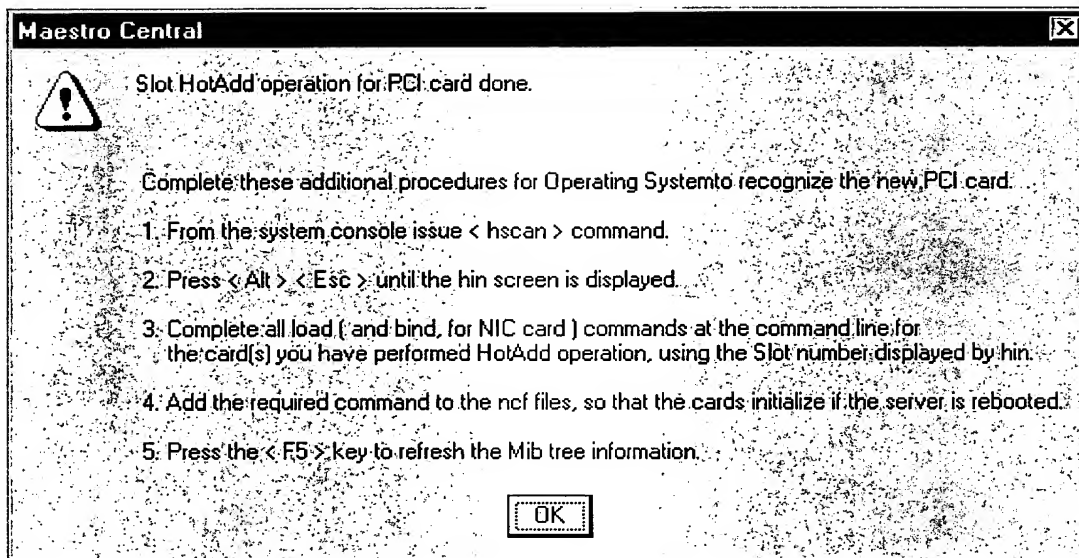 


FIG. 32